



# CDVI

31, av. du Gal Leclerc  
 93500 PANTIN FRANCE  
 Tel : 33 (0)1 48 91 01 02  
 Fax : 33 (0)1 48 91 21 21  
 www.cdvi.com

## PROMI 500

### PIN Code and/or Badge STAND-ALONE PROXIMITY SYSTEM


# WIRING DIAGRAM AND INSTRUCTIONS

#### Wiring diagram PCB front view

ST2


- 1 ■ • 3 N/C contact RL1 (magnet)
- 1 • ■ 3 N/O contact RL1 (strike)

**Warning**  
 Do not use a switching power supply because of the interference radiation that may disturb the

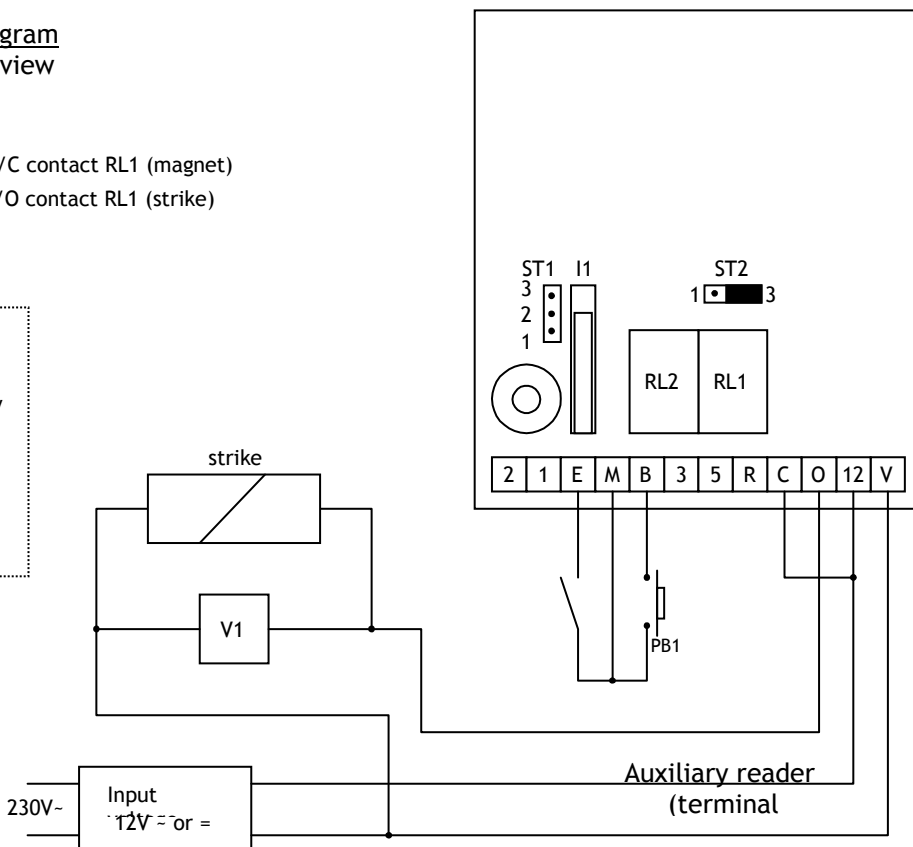

|     |                     |
|-----|---------------------|
| B   | Request-to-exit PB1 |
| E   | Alarm Input         |
| M   | Common PB1, E and 4 |
| O   | Relay 1 contact     |
| C   | Common              |
| R   | Relay 2 N/C contact |
| I1  | Anti-tamper switch  |
| V1  | Varistor            |
| ST1 | Jumper for reset    |
| ST2 | Jumper for relay 1  |
| RL1 | Door relay          |
| RL2 | Alarm relay         |


|    |              |
|----|--------------|
| 12 | Power supply |
| V  | Power supply |
| 1  | Data         |
| 2  | Buzzer       |
| 3  | Green LED    |
| 4  | Common M     |
| 5  | Red LED      |

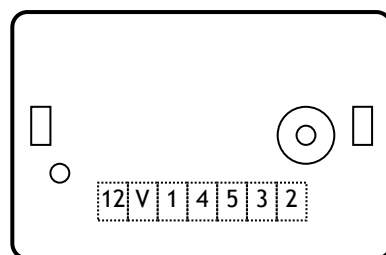

See wiring diagram auxiliary reader

This device comes with a varistor.

The varistor must be connected on the strike terminal (electromagnet...) operated by the device. If this product operates more than one strikes, each of them should have a varistor. The varistor controls the overload produced by the strike coil - back emf.

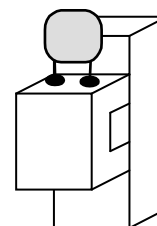

If you are using a « Shear Lock » electromagnetic lock, it is recommended to use a separate power supply than the one connected to the PROMI.

## Technical features

|   |   |
|---|---|
| Input voltage   | 12 VAC/DC   |
| Output  | 1 relay, N/O & N/C contact and 1 relay N/O contact 3A /125V   |
| Anti-triggering contact                               | 500 mA 50 V ~ or =  |
| Badge entry   | 500 programmable badges   |
| PIN Code  | 500 programmable codes, 5-digit PIN code  |
| Master code   | 5-digit programmable code   |
| Input   | 1 request-to-exit   |
| Keyboard  | 12-digit keypad with built-in buzzer (audible signal)   |
| Distance between the second reader and the PROMI unit | minimum 24 inches (60 cm)<br>maximum 45 yards (50 meters)<br>(cable minimum 7 x 0.6 mm <sup>2</sup> ) |

**Warning:** Do not use a switching power supply because of radiation interference, which may disturb the reading of the badges.

## Default values

|                     |            |
|---------------------|------------|
| Master code:        | 12345      |
| Door release time : | 1 second   |
| Key-in keypad:      | 10 seconds |
| Alarm:              | Off        |

## Audible Signals

|                 |  |
|-----------------|--|
| 1 beep (long)   | Validation of data in programming mode: master code, proximity badge or time.<br><b>Or</b> access code validated |
| 2 beeps (short) | Accessing the programming mode<br>or exiting from the programming mode   |
| 4 beeps (short) | incorrect mode, user number and time outputs entered   |

## Visual Signals

| LED color       | Normal mode           | Programming mode          |
|-----------------|-----------------------|---------------------------|
| Green           | Door relay activated  | Code/Badge position empty |
| Red             | Alarm relay activated | Code/Badge position busy  |
| Orange          |                       | Programming mode          |
| Orange flashing | Stand-by              | Data computing error      |

## Request-to-exit

The request-to-exit push button PB1 operates relay RL1.  
The LED turns green when the relay is activated.

### Setting a New Master Code

Enter the master code twice (for the first use, the master code default is 12345). 2 beeps will sound and the orange LED illuminates to confirm that you are in programming mode.

Enter \*3 then 5-digit for the new master code. The LED goes out for 1 second and an audible beep indicates that the new master code is accepted.

Press # to exit from the programming mode. 2 beeps confirm that the reader is in standby mode.

4 beeps indicate a data computing error.

### Setting the Mode and Time Outputs

Enter the master code twice (for the first use, the master code default is 12345).

2 audible beeps, and the orange LED illuminates to confirm entry into programming mode.

|                |  |
|----------------|--|
| Operating mode | Enter *0 then the 2-digit mode number:<br>00: PIN code and proximity badge, up to 500 users (500 PIN + 500 badges)<br>01: Proximity badges only up to 500 users.<br>02: PIN codes or proximity badges, up to 500 users.<br>The LED goes out for 1 second and an audible beep indicates the time has been accepted. |
| Door relay     | Enter *1, then the door release time in seconds:<br>01 equal 1 second up to 99 for 99 seconds.<br>00 sets a latched output (toggle on/toggle off)<br>The LED goes out for 1 second and an audible beep indicates the time has been accepted.   |
| Alarm Relay    | Enter *2, then the time delay in seconds:<br>01 equal 10 seconds up to 99 for 990 seconds.<br>00 for alarm off<br>The LED goes out for 1 second and an audible beep indicates the time delay has been accepted.  |

Press # to exit from the programming mode. 2 beeps confirm that the reader is in standby mode.

4 beeps indicate a data computing error.

### Setting New PIN Codes and Badges

Enter the master code twice (for the first use, the master code default is 12345).

2 audible beeps, and the orange LED illuminates to confirm entry into programming mode.

Enter the user number (000 to 499). If the LED is green, the user number is available, therefore present a badge in front of the main reader. Once the audible beep will sound and the green LED will change to orange

Press \* to validate the badge, without entering a PIN code, and then enter the next user number to program another badge.

or

To program also a PIN code with the badge, enter a 5-digit code a long beep will sound to confirm that the badge and PIN code have been stored.

If the LED is red the user number is unavailable, therefore press the \* key twice to cancel the old badge/code. Or enter the next available user number

Press # to exit from the programming mode. 2 beeps confirm that you have returned to standby mode.

#### Deleting or Replacing Badges and PIN Codes

Enter the master code twice (for the first use the master code default value is 12345). 2 beeps and the orange LED light on to confirm that you have entered into the programming mode.

Enter the user number (000 to 499). The LED lights off during 1 second and an audible beep is emitted.

The red LED lights on indicating that the user number is unavailable.

Press the \* key twice (\*\*) to delete the badge and PIN code. The LED lights off during 1second and an audible beep is emitted. The green LED lights on indicating that the PIN code and/or badge have been deleted, the user number (location number) is now empty.

Present the new badge in front of the main reader. Press \* to validate the badge, without the PIN code, and then enter the next user number to program another badge.

or

To program also a PIN code with the badge, enter a 5-digit code a long beep will sound to confirm that the badge and PIN code have been stored.

To exit from the programming mode at any time press the # key. 2 beeps confirm that you have returned to the standby mode.

#### Reset the Master Code and the PIN codes/Badges

Put the jumper ST1 to position 2-3.

The green LED blinks during 5 seconds. An audible beep confirms that the master code has been reset to the default value 12345. The red LED blinks.

Take off the jumper from position 2-3 to go back to a normal mode.

OR

Keep the jumper on position 2-3 to reset all the proximity badges.

The red LED blinks during 5 seconds then stays on during the reset.

When the reset is completed the red LED lights off.

Take off the jumper from position 2-3 to go back to a normal mode.

#### Operating Instructions

Mode 00: Present the badge in front of the PROMI one audible beep will sound to confirm that the badge is valid, **then** enter the PIN code.

Mode 01: Present the badge in front of the PROMI reader or of the second reader.

Mode 02: Present the badge in front of the PROMI reader, the second reader **or** enter the PIN code.

After 3 incorrect badge and/or PIN code are entered, the PROMI reader and the second proximity reader are locked out during 30 seconds and the alarm relay is activated. 2 audible beeps sound when the badge/PIN code are not valid.

#### Alarm Function

The tamper switch activates the relay of the alarm when the front panel is removed. If the alarm time delay is different to 00, the door monitoring (door ajar or door forced open) is enabled:

When the door is opened, without being activated by the request-to-exit button or a badge, the alarm relay is activated after 1 second and the red LED lights on (forced open door).

When the badge or the request-to-exit button are used to open a door, if the door stays open, the open contact will trigger the alarm relay according to the door relay output.

**Momentary output** - the alarm time delay begins at the end of the door release time. If the door is maintained open after the alarm time delay, the alarm relay is activated and the red LED lights on. Closing back the door will deactivate the alarm relay and the LED lights off.

**Latched output** - the alarm time delay begins only when the door stays open after ordering the closing by presenting back the badge or pressing on the request-to-exit button, the alarm relay is activated and the red LED lights on. Closing back the door will deactivate the alarm relay and the LED lights off.


User badges list (Make other copies if needed) :

| User number | Name | User number | Name | User Number | Name | User number | Name |
|-------------|------|-------------|------|-------------|------|-------------|------|
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |
|             |      |             |      |             |      |             |      |

| Time outputs                 | Function n° | Values  | Programmed values |
|------------------------------|-------------|---|-------------------|
| Keypad key-in Time           | * 0         | 10 = 10 sec, 99 = 99 sec                        |                   |
| Door release time            | * 1         | 01 = 1 sec, 99 = 99 sec                         |                   |
| « opened door » before alarm | * 2         | 00 = without alarm<br>01 = 10 sec, 99 = 990 sec |                   |
| Master code                  | * 3         | 5-digit code                                    |                   |

|                     |          |      |
|---------------------|----------|------|
| Supervisor :        |          | Date |
| Building :          |          |      |
| N° :                | Street : |      |
| City :              |          |      |
| Other information : |          |      |

### Wiring diagram auxiliary reader

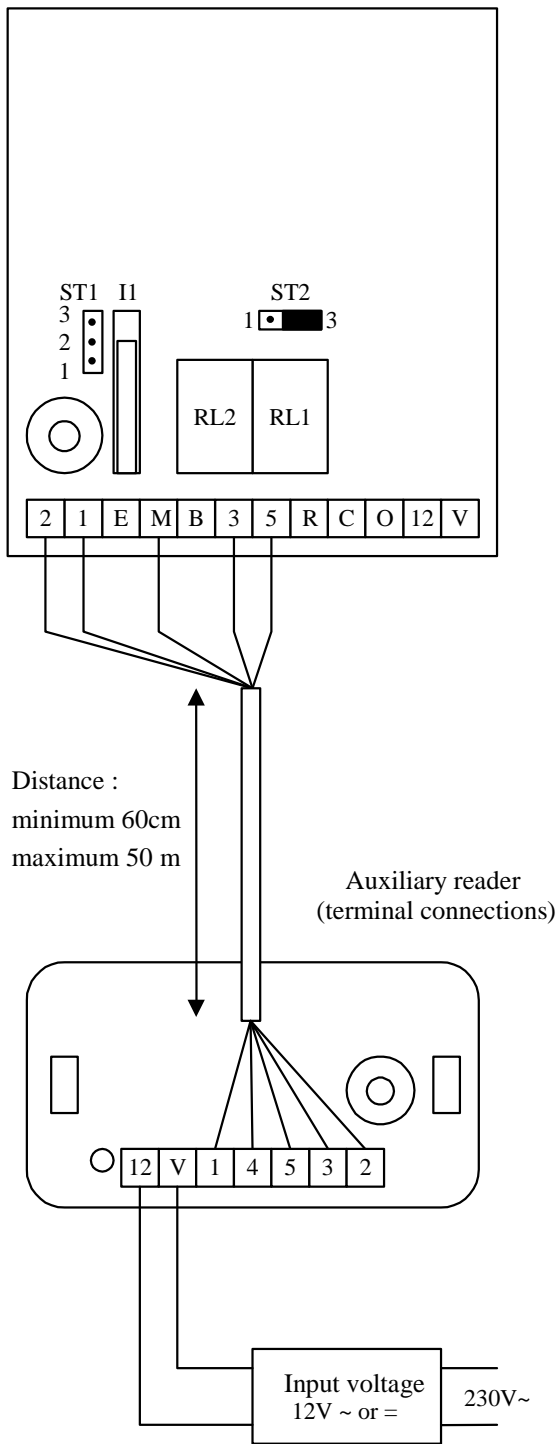

| PROMI | Reader       |
|-------|--------------|
| 12    | Power supply |
| V     | Power supply |
| 1     | 1 Data       |
| 2     | 2 Buzzer     |
| 3     | 3 Green LED  |
| M     | 4 Common     |
| 5     | 5 Red LED    |

It is recommended to use a separate power supply for the auxiliary reader